




349E L EXCAVATOR QUICK COUPLER INSTALLATION INSTRUCTIONS

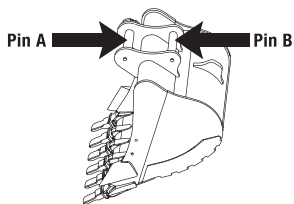


1 Push pin A into place.

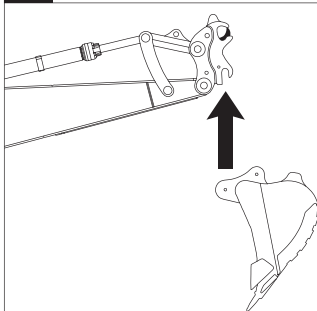


2 Curl bucket upward.

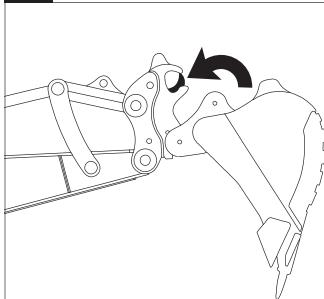


3 Use tool (included) to depress the latch.

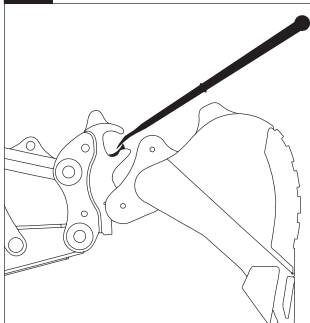


4 Hold down latch, curl pin B into place.

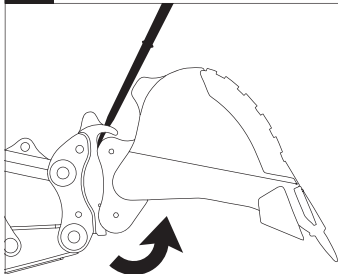


349E L EXCAVATOR QUICK COUPLER REMOVAL INSTRUCTIONS

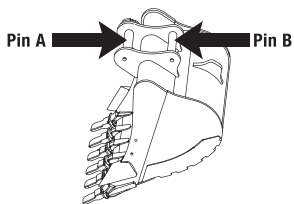


1 Depress black latch with tool (included).

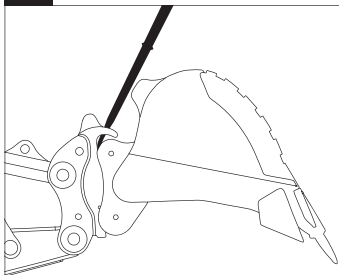

2 Pull pin B out of the quick coupler.

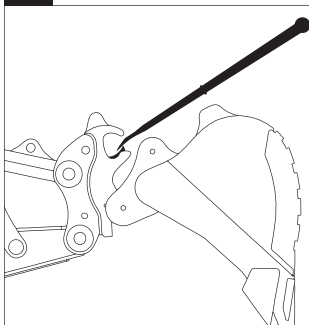

3 Curl bucket downward.

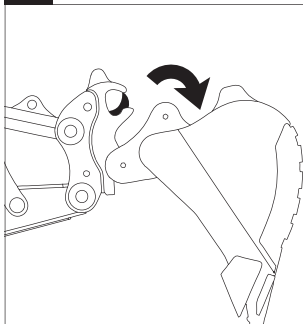

4 Remove pin A by pulling down.

